

England's Stove Works, Inc.

*Pellet Stoves
Corn Stoves
Gas Stoves
Wood Stoves*

P.O. Box 206 Monroe, VA 24574 www.englishstoves.com Phone: (800) 516-3636 Fax: (434) 929-4810

Burn Pot Gasket


**WARNING: BE SURE TO READ YOUR OWNER'S MANUAL BEFORE INSTALLING OR OPERATING YOUR STOVE.
ALWAYS FOLLOW ALL CODES.**

To replace the burn pot gasket, first remove the burn pot by loosening the two, half-inch (1/2") bolts that are located under the ash lip (III. 1).

Pull the burn pot forward, until it clears the end of the feed tube. Then, rotate the burn pot and remove it from the stove.

Scrape any residue or gasket material from the burn pot and the back of the stove's firewall. Install the new gasket against the firewall of the stove, *ensuring that the hole for the igniter (if applicable) is on the proper side.* Reinstall the burn pot and tighten the two bolts.

Technical Support: (800) 245-6489
Web Site: www.englishstoves.com

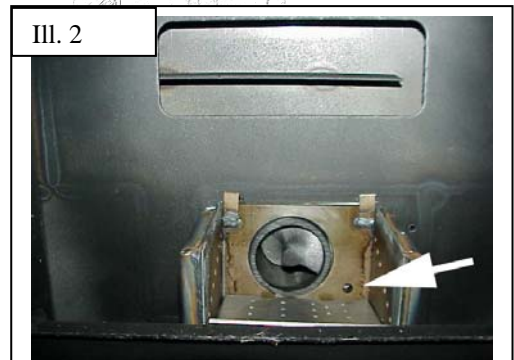

Place gasket against the firewall. Be sure that the hole for the igniter (if applicable) is on the proper side.

